

On-site Wastewater Management Training Course

Irrigation Systems

Componentry, Selection and Design

Centre for Environmental Training



Irrigation Systems

- Irrigation must be managed to minimise public health and environmental risks, as effluent quality is not always consistent or compliant
- The design, selection and configuration of components of an irrigation system are as important to effective operation as the irrigation area sizing
- Design as a system to ensure uniform distribution

Centre for Environmental Training




This Presentation

- Describes the components which commonly make up irrigation systems for effluent treated by on-site systems
- Discusses some selection issues
- Emphasises that components of a wastewater system must be matched and that irrigation systems require careful hydraulic design to ensure effective and compliant operation

Centre for Environmental Training



Wastewater Irrigation System Components

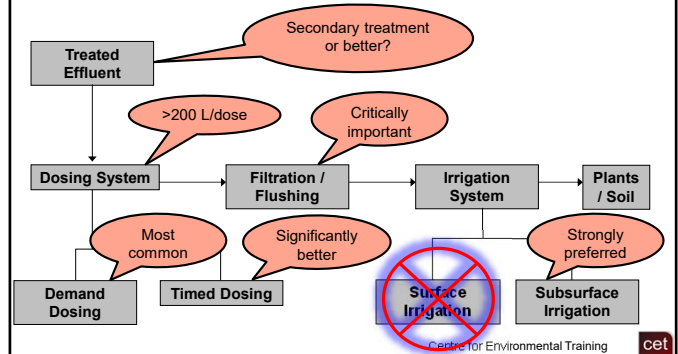

Centre for Environmental Training



System Components

- | | |
|---------------------------|---|
| • Wastewater source | • Sequencing valve |
| • Treatment system | • Laterals |
| • Dosing mechanism | • Drippers or sprinklers |
| – Pump | • Air/vacuum valves |
| – Flout or Siphon | • Dripper line non-leakage (DNL) valves |
| • Non-return valve | • Flushing valves |
| • Pressure reducing valve | • Flush line, field flush |
| • Filter | |
| • Mainline, submains | |

Centre for Environmental Training



Dose and Dosing Mechanism

- AS/NZS1547:2012 recommends 200L minimum
- Should be 2-3 x the system fill volume
- Larger volumes result in better field distribution
- Technologies used for dosing:
 - Pump for pressure system
 - Flout or Siphon for low pressure (drilled pipe) system
- Tipping bucket not appropriate – dose too small

Centre for Environmental Training




Dosing System

- Float switches do not balance shock wastewater loads
- Constrained sites may require a balance tank and timer controlled pump to ensure even distribution over time
- A high level alarm should be fitted to the system to warn of system failure

Centre for Environmental Training




Demand Dosing vs Timed Dosing

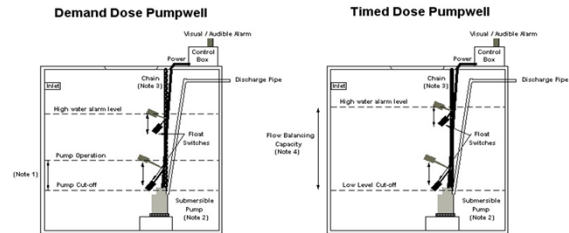

Centre for Environmental Training



Dose Volume

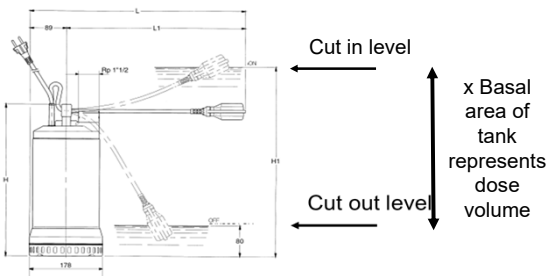

Centre for Environmental Training



Pump Selection


- Needs to be appropriate for wastewater
- Made of non-corrosive materials
- Correct hydraulic duty (Flow (Q) and Head (H)) for actual operating point of the system
- Operating point needs to be as close to optimum efficiency point (mid-point on pump curve) as possible
- Affordability

Centre for Environmental Training



Pump Selection

- Pump performance is described by a pump curve
- In terms of Flow (Q) and Head (H)

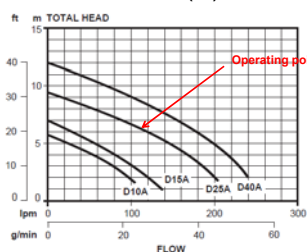

Centre for Environmental Training



Pump Selection

- Surface irrigation systems using common domestic rotary sprinklers and spray heads operate correctly with ~4-10m head at the top of system and flow rates of 2-6L/min for each sprinkler operating
- Sprinkler operating head + friction loss in the pipe will almost always require most if not all of this head capacity (leaving limited capacity for static lift)
- Subsurface irrigation systems typically require a 10-30m head operating pressure

Centre for Environmental Training



Pump Selection

- Typical pumps in many accredited AWTS/STS have:
 - 6-12m maximum head capacity
 - 33-130L/min maximum flow rate
- Pumps supplied are often of insufficient capacity to uniformly irrigate correctly sized irrigation areas (based on soil type and/or water and nutrient balances), even when divided into a number of smaller sections or zones

Centre for Environmental Training




Pump Selection

- Uneven effluent distribution is a significant contributor to AWTS failure
- Irrigation area sizing requirements may create need for a bigger pump than typically supplied
- A one size fits all approach to pumps is not practical

Centre for Environmental Training



Pump Selection

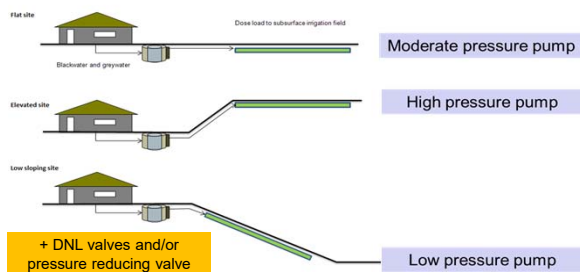

Centre for Environmental Training



Low Pressure Dosing Devices

Siphon



Flout



Centre for Environmental Training



Filters

- Filtration of effluent is essential for effective irrigation
- Cylindrical mesh filters are usually sufficient for surface irrigation systems (typically 150 mesh, 100 micron rated filters)
- Disc filters are more suitable for subsurface irrigation systems
- Need regular cleaning as part of each service
- If filter clogs frequently, need to investigate and solve treatment system problem

Centre for Environmental Training



Filters

Mesh filter



Disc filter



Centre for Environmental Training



Mainlines, Submains

- Typically 25mm or larger diameter PVC or polyethylene piping
- Manifold and laterals should be buried
- In older systems may sit on ground surface
- Most Councils no longer allow laterals to be on the surface due to mismanagement and increased public health risks
- Surface exposure also increases potential for damage (e.g. mowers, animals) and degradation (e.g. exposure to UV)

Centre for Environmental Training



Mainlines, Submains

Pipe selection is part of hydraulic design. Need to consider:


- Energy losses in pipe
- Flushing velocity required to entrain air and sediment $>0.8\text{m/sec}$ (some $>0.3\text{m/sec}$)
- Pressure rating - AS/NZS requires pipes to be rated at 150% of the shut off head (of the pump)
- Consider cost, including fittings

Centre for Environmental Training



Sequencing Valves

- Used to automate irrigation to a number of zones in sequence
- Improves hydraulic performance of the irrigation field – reduces demand on pump

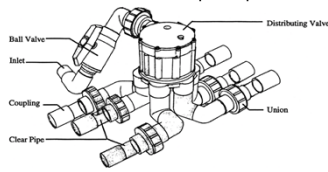

Centre for Environmental Training



Surface Irrigation

- Wide variety of spray heads (rotary, impact, spray nozzles, drippers) and risers (fixed, spike, pop-up)
- There are only a limited range of spray heads specifically designed for domestic effluent irrigation, but many for clean water
- Sprays must not generate aerosols and should have a throw and plume height that is suitable for the site

Centre for Environmental Training




Sprinkler Layout and Recommended Overlap

Average conditions:

$S = L = 60\%$ of the wetted diameter of sprinkler

Windy or exposed conditions:

$S = L = 50\%$ of the wetted diameter of sprinkler

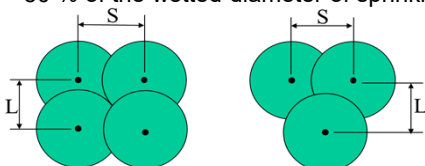

Centre for Environmental Training



Problems with Surface Irrigation



Subsurface Irrigation

- Significant developments in subsurface drip technology for effluent irrigation makes subsurface irrigation the industry standard
- Involves pressure dosing of 16mm pipe fitted with turbulent flow or pressure compensating emitters
- Built-in or dosed protection against root intrusion and biofilm development (Trifluralin)

Centre for Environmental Training




Subsurface Irrigation

- Places effluent directly in the root zone and prevents surface runoff during rainfall
- Allows more use of and ease of maintenance of an irrigation area
- Careful hydraulic design and layout is essential (effluent filtration, line flushing, vacuum release valves, correct spacing of laterals/emitters etc); though this is often not undertaken

Centre for Environmental Training



SSI Setup for 1,200L/day System on Category 4 Soil

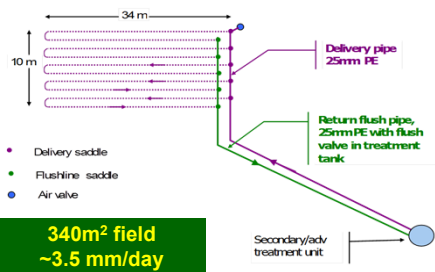


ecoEng


Centre for Environmental Training



Subsurface Irrigation System Layout

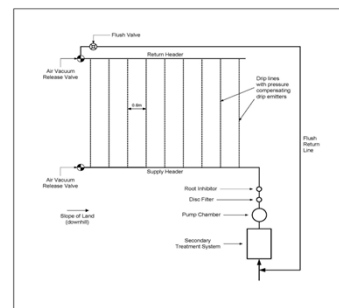

Revised Figure M1
Page 167
AS/NZS1547:2012 to
ensure even pressure
in lines for effective
distribution and flushing



Centre for Environmental Training



Dripper Lines



Centre for Environmental Training




Dripper Laterals

- Typically buried at 100-150mm depth
- May be placed on surface beneath mulch
- Commonly pressure compensating (PC) and anti-siphon (AS) for sloping sites, or
- Non-pressure compensating for flat sites
- Laterals commonly spaced 0.6-1.0m apart depending on soil texture
- Space laterals more widely at bottom of slope
- Maximum 100m dripper line run length

Centre for Environmental Training



Dripper Spacing

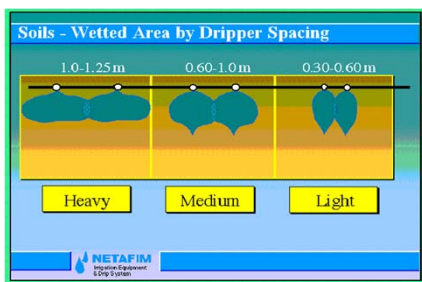

Centre for Environmental Training



Dripper Line Selection



Conventional dripper line

KISSS dripper line
Centre for Environmental Training



Pressure Compensation

- Flowrate from the drippers remains constant for varying in-line pressures. Why is this important?


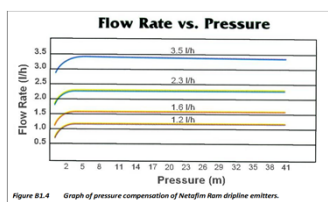


Figure 81.4 Graph of pressure compensation of Netafim Ram dripline emitters.

Centre for Environmental Training



Pressure-compensating Emitters

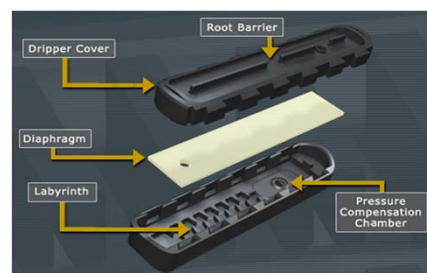

Centre for Environmental Training



Operating Pressure and Flowrate

- Typical operating pressures - 5 to 40m.head
- Typical flowrate - 1.5 to 4.0L/hr per dripper (some specify per m)
- What factors should be considered when selecting emitter pressure and flowrate?

Centre for Environmental Training



Dripper Line (Tube) Non-leakage Valve (DNL/TNL)

- Shuts off flow through the valve when line pressure drops below 2, 4 or 6m.head
- Opens and allows flow when the line pressure exceeds 8, 12 or 16m.head

Model	Shut-off pressure (m) **	Minimum Operating Pressure (m) **	Max. working Pressure (m)	Recommended Flow rate range (l/hr)
RED	2.0m (2.0m)	8.0m (4.0m)	40m	0-1,000
BLACK	4.0m (4.0m)	12.0m (7.0m)	40m	0-1,000
BROWN	6.0m (8.0m)	16.0m (11.0m)	40m	0-1,000



Centre for Environmental Training



DNL/TNL Valve

- Eliminates the need for the irrigation system to refill at the beginning of each irrigation cycle by holding pressure in the irrigation lines and thus keeping them filled. This ensures the system reaches operating pressure in the minimum of time
- The DNL valve prevents draining of the system to the lowest point where the system is installed on a slope, thus providing a more uniform distribution of effluent


Centre for Environmental Training



Airlocks / Air (Release) Valve

Installed at high points to:

- Evacuate air from the laterals during system start-up, and
- Prevent a vacuum from occurring after pump turns off, thus avoiding debris intrusion into the drippers

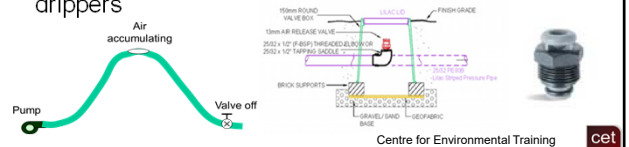

Flushing / Flush Valve

- Can return flush line to treatment system, or field flush to soakaway
- Flush valves can be automatic or manual
- Automatic flush on start-up; flushes ~4 litres



automatic



manual

Centre for Environmental Training



Flush Valve Operation

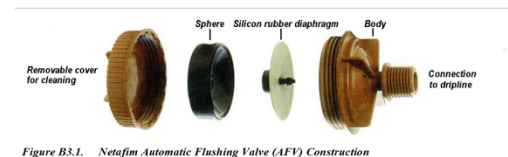


Figure B3.1. Netafim Automatic Flushing Valve (AFV) Construction

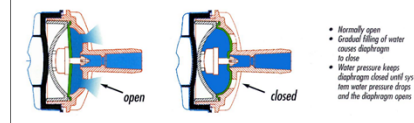


Figure B3.2. Netafim Automatic Flushing Valve (AFV) Operation.

Centre for Environmental Training




Flushing Velocity

- Flushing velocity can be calculated using the continuity equation (part of hydraulic design)
- Must be sufficient to entrain air and sediment in lines
- Typically $>0.8\text{m/sec}$ required
- Some driplines rated $>0.3\text{m/sec}$

Centre for Environmental Training



SSI Setup for 1,200L/day System on Category 6 Soil

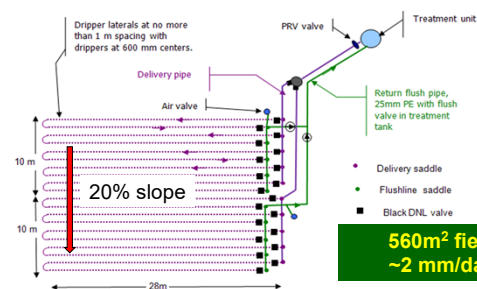

ecoEng

Centre for Environmental Training



Installation – Critical Phase

- Clear and detailed specifications
- Competent and experienced installers
- Follow manufacturers instructions / manuals
- Pipe installation to AS/NZS standards
- May need to rotary hoe or improve ground
- Protect against future damage
- Divert run-on stormwater
- Erect warning signs
- Fence off
- Observe OH&S requirements
- Make good



Centre for Environmental Training



Commissioning

- Check pumps and aerators
- Fill pump well with clean water
- Pressure test all pipelines
- Check flush lines
- Check alarm system
- System should be inspected by regulator at this stage

Centre for Environmental Training



Management of Irrigation Systems

- Do not irrigate low growing crops which are not cooked before eating
- Avoid vehicular and animal traffic
- Keep clear of sensitive receptors such as; clotheslines, swimming pools, barbecues, children's play equipment, open windows etc.

Centre for Environmental Training



Operation, Maintenance and Servicing Manuals

1. For home owner
2. For servicing agent:
 - Flushing – automated/manual
 - Regular monitoring and cleaning of filter(s)
 - Regular check for blockages, leaks and surface ponding
 - Desludging monitoring
 - Power outage procedures
 - Record keeping:
 - File as-built plans
 - Record location of pipelines
 - Record failures and problems
 - Service report to Council and copy to owner

Centre for Environmental Training



Summary

Design requires application of understanding of:

- Site specified details (soils, slope, flood and/or frost risk, landscape requirements, local regulations etc.)
- Nature of effluent being handled
- Equipment performance and interaction of components
- Clear understanding of required outcomes
- Careful hydraulic design to match components and ensure satisfactory hydraulic performance

Centre for Environmental Training

